


SPINDLE BED - KING SIZE


CODE	DESCRIPTION
51246	OAK SPINDLE BED - EU KING SIZE - WITHOUT SLATS 180/200/97
45186	WALNUT SPINDLE BED - EU KING SIZE - WITHOUT SLATS 180/200/97
51236	OAK SPINDLE BLACK BED - EU KING SIZE - WITHOUT SLATS 180/200/97

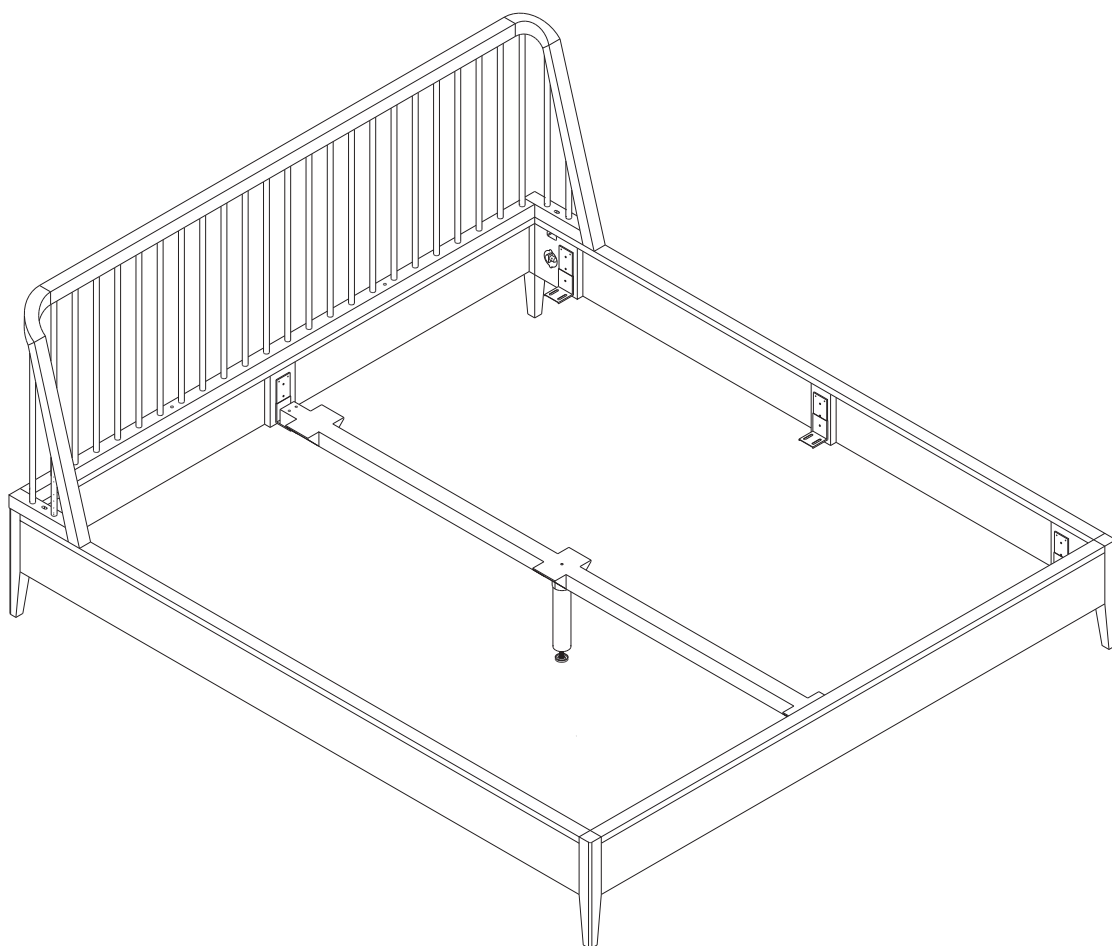

SPINDLE BED - KING SIZE

ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION


NOTE

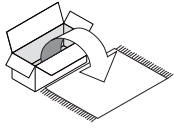

CAREFULLY OPEN THE CARTON, REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.




CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDA MAGE. DO NOT USE DAMAGED OR DEFECTIVE PARTS/ HARDWARE. CONTACT ETHNICRAFT FOR ANY MISSING PART AND OR HARDWARE.



X3

READ THE ASSEMBLY INSTRUCTION BEFORE INSTALLATION AND CAREFULLY FOLLOW THE INSTRUCTION GIVEN. SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THESE INSTALLATION OR HAVE ANY DOUBTS ABOUT THE SAFETY OF THIS INSTALLATION.


IT IS ADVISABLE TO DO THIS ASSEMBLY WITH MINIMUM OF 3 PERSONS.

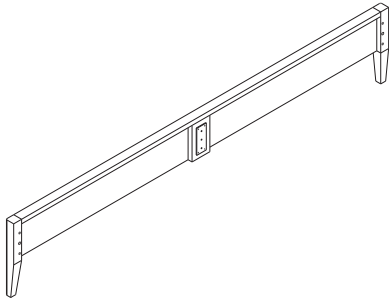

(C) FOOTBOARD 1piece


CODE	DESCRIPTION
P4543	OAK FOOTBOARD FOR EU KING BED
P7111	WALNUT FOOTBOARD FOR EU KING BED
P4748	OAK BLACK FOOTBOARD FOR EU KING BED

PARTS TO ASSEMBLE

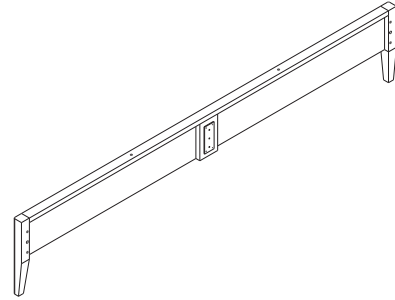


(A) HEADBOARD 1piece

CODE	DESCRIPTION
P4536	OAK HEADBOARD FOR EU KING BED
P7110	WALNUT HEADBOARD FOR EU KING BED
P4746	OAK BLACK HEADBOARD FOR EU KING BED

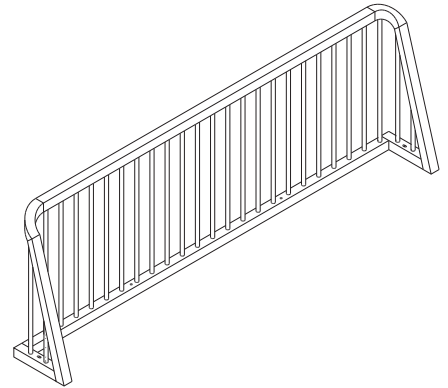

(B) BED HEAD 1piece

CODE	DESCRIPTION
P4518	OAK BED HEAD FOR EU KING BED
P7112	WALNUT BED HEAD FOR EU KING BED
P4744	OAK BLACK BED HEAD FOR EU KING BED

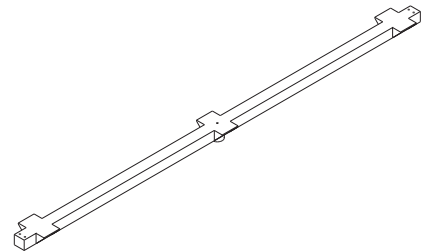


(E) CENTER SUPPORT 1piece

CODE	DESCRIPTION
H1165	CENTER SUPPORT FOR EU KING BED



(F) CENTER LEG 1piece

CODE	DESCRIPTION
H1260	CENTER LEG FOR EU BED




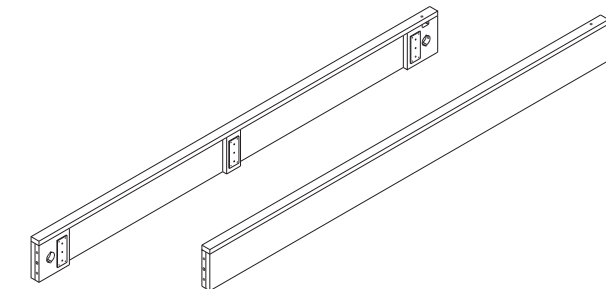


(D) SIDE RAIL 1set (left & right)




CODE	DESCRIPTION
P4502	OAK SIDE RAIL FOR EU KING BED
P7107	WALNUT SIDE RAIL FOR EU KING BED
P4750	OAK BLACK SIDE RAIL FOR EU KING BED

SPINDLE BED - KING SIZE
ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION


HARDWARE ENCLOSED

 H0667 HALFMOON WASHER (4pcs)	 H0666 HALFMOON BOLT M8x100 (4pcs)	 H0308 DOWEL Ø12x50 mm (8pcs)	 H0742 JCBC SCREW M6x70 (4pcs)	 H0228 LONG NUT M6 (2pcs)
 H0951 L BRACKET (8pcs)	 H0949 JCBC SCREW M6x6 (8pcs)	 H0757 JF SCREW M6x50 (5pcs)	 H0746 NUT M6 (4pcs)	
 H0987 SPRING WASHER M6 (2pcs)	 H0307 WASHER M6x18 (2pcs)	 H0744 WASHER M6 (4pcs)		

TOOLS
(Included in packaged)

 H0865 L KEY	 H0741 HALFMOON KEY	 H0875 WRENCH
--	---	---


TOOL
(Not included in packaged)

 SCREWDRIVER


SYMBOLS



DIRECTION



NUMBER OF
PERSONS NEEDED

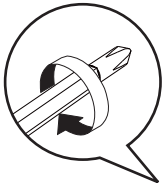

USE SCREWDRIVER
TO TIGHTEN




USE WRENCH
TO TIGHTEN



USE L KEY
TO TIGHTEN



USE HAND


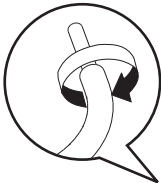


USE HALFMOON KEY
TO TIGHTEN

SPINDLE BED - KING SIZE



ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION

A. CONNECTING SIDERAIL AND HEAD / FOOTBOARD

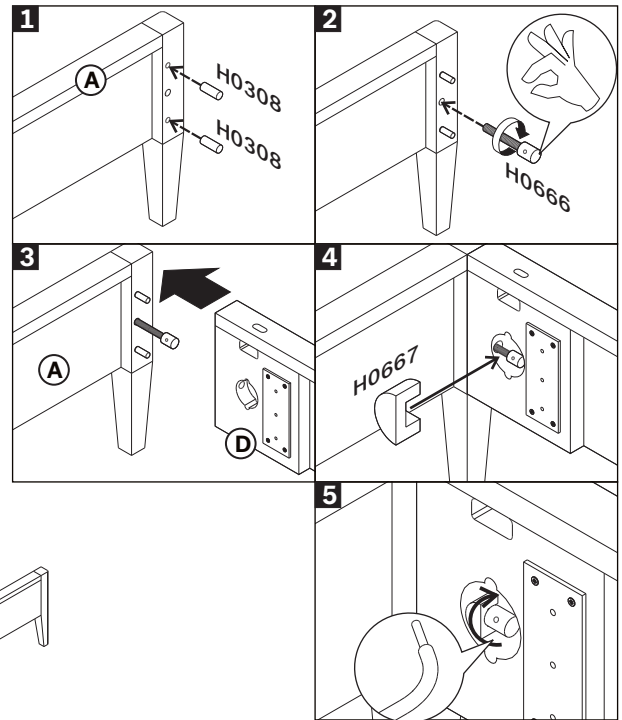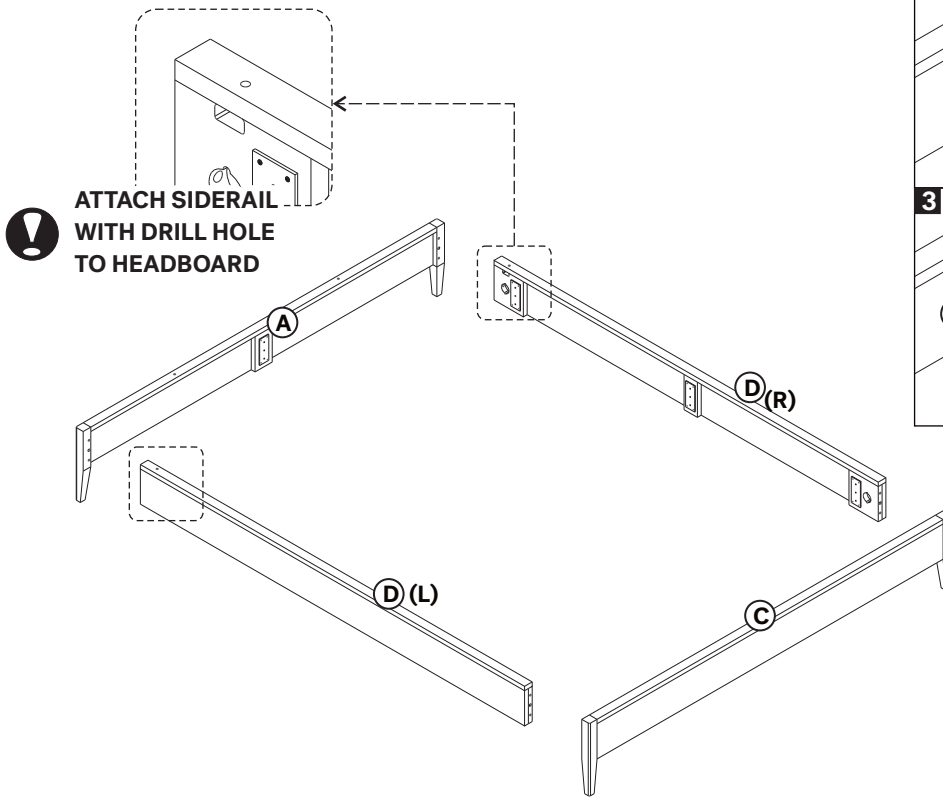

- USE DOWEL Ø12x50 (8X)
- USE HALFMOON BOLT M8x100 (4X)
- USE HALFMOON WASHER (4X)
- TIGHTEN FULLY

B. CONNECTING CENTER LEG TO CENTER SUPPORT


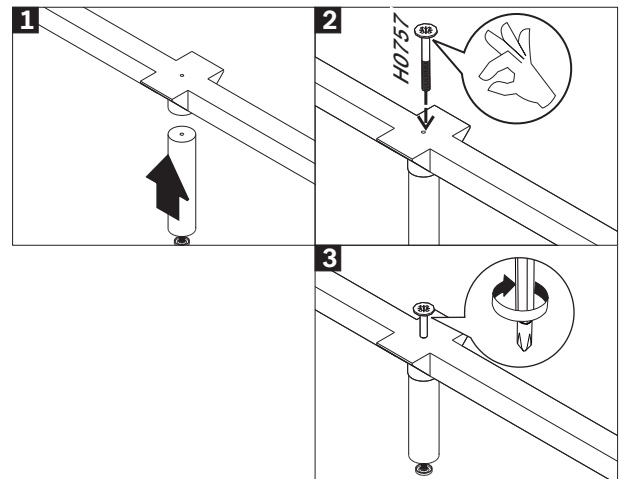
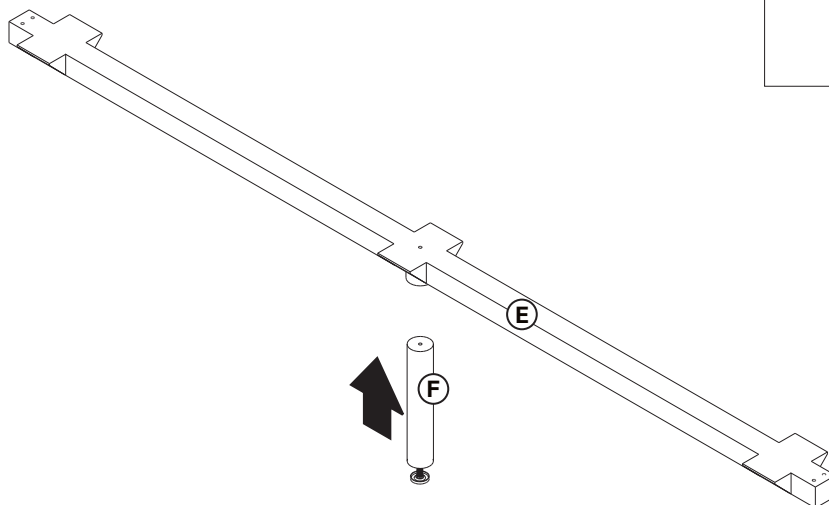


- USE JF SCREW M6x50 (1X)
- TIGHTEN FULLY

SPINDLE BED - KING SIZE




ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION

C. INSTALLING CENTER SUPPORT

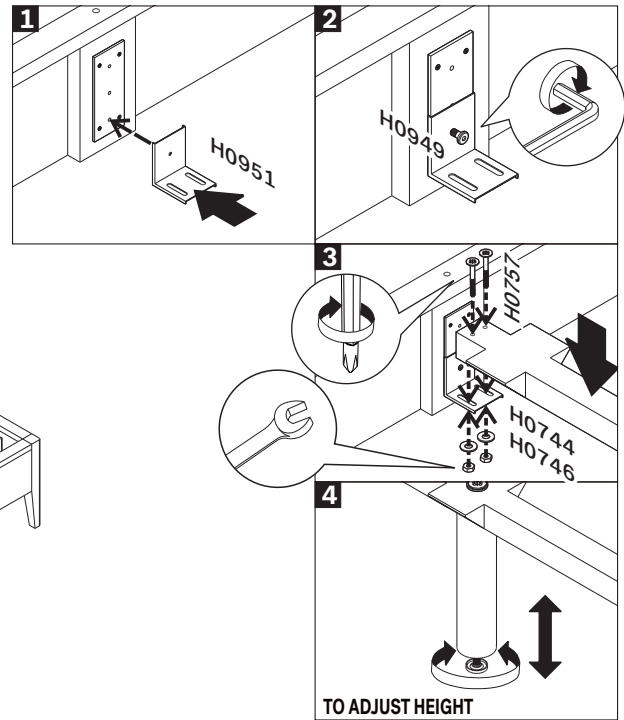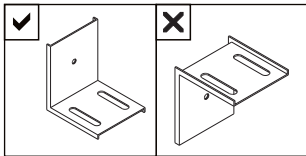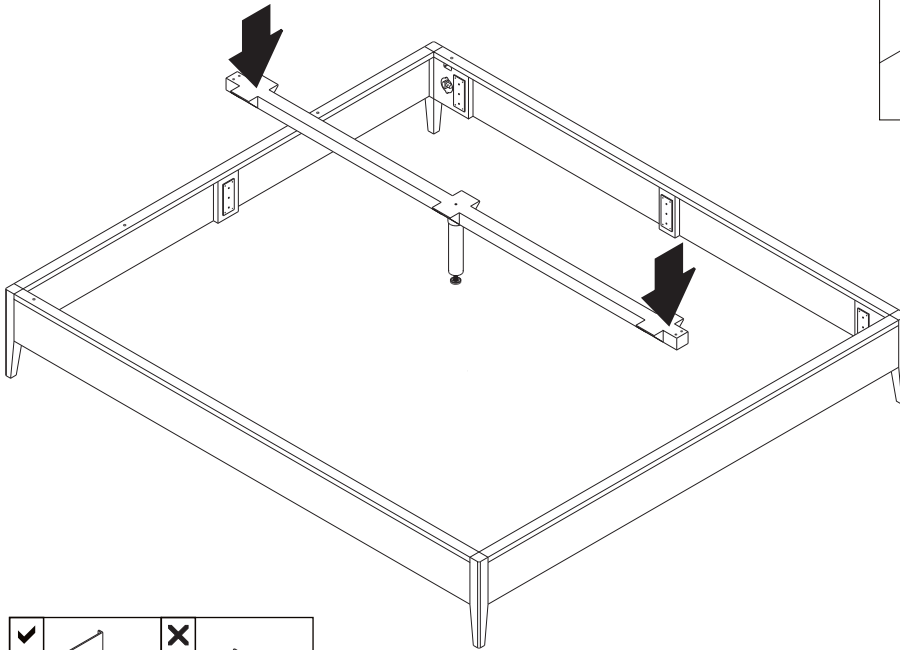

- USE L BRACKET (2X)
- USE JCBC SCREW M6x6 (2X)
- USE JF SCREW M6x50 (4X)
- USE WASHER M6 (4X)
- USE NUT M6 (4X)
- TIGHTEN FULLY ALL SCREWS

D. INSTALLING L BRACKET

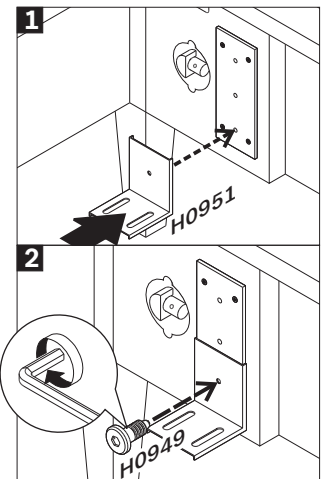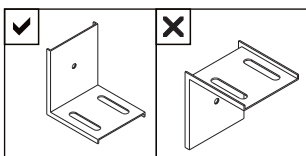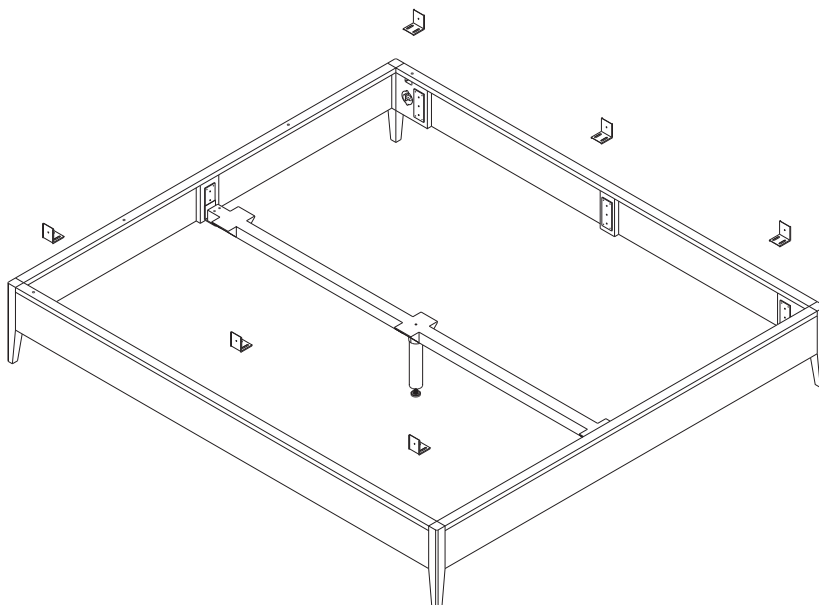



- USE L BRACKET (6X)
- USE JCBC SCREW M6x6 (6X)
- TIGHTEN FULLY ALL SCREWS
- INSTALLING SLAT SUPPORTS AT THE SAME LEVEL WITH CENTER SUPPORT

SPINDLE BED - KING SIZE

ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION



E. INSTALLING BED HEAD

INSTALL SCREW ON THE MIDDLE SIDE FIRST

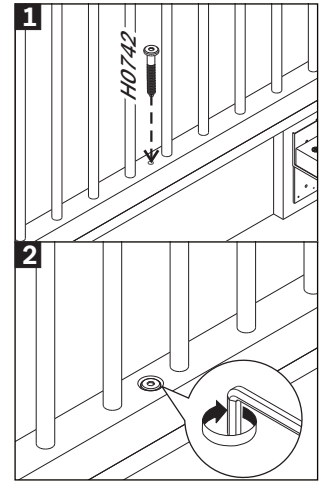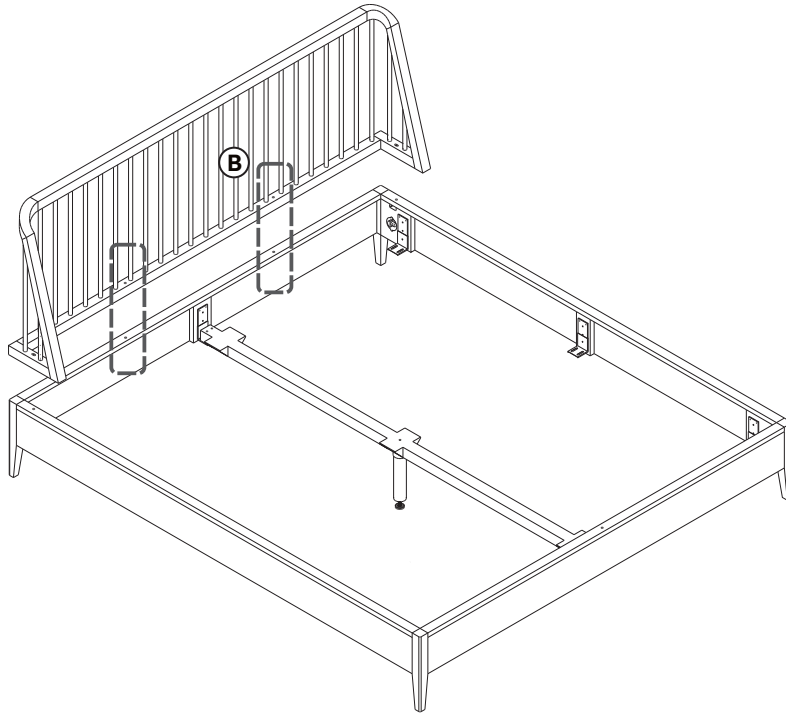

- ! - USE JCBC SCREW M6x70 (2X)
- DO NOT FULLY TIGHTEN

THEN INSTALL SCREW ON THE OTHER SIDE

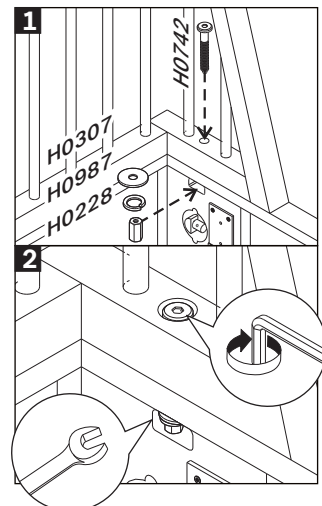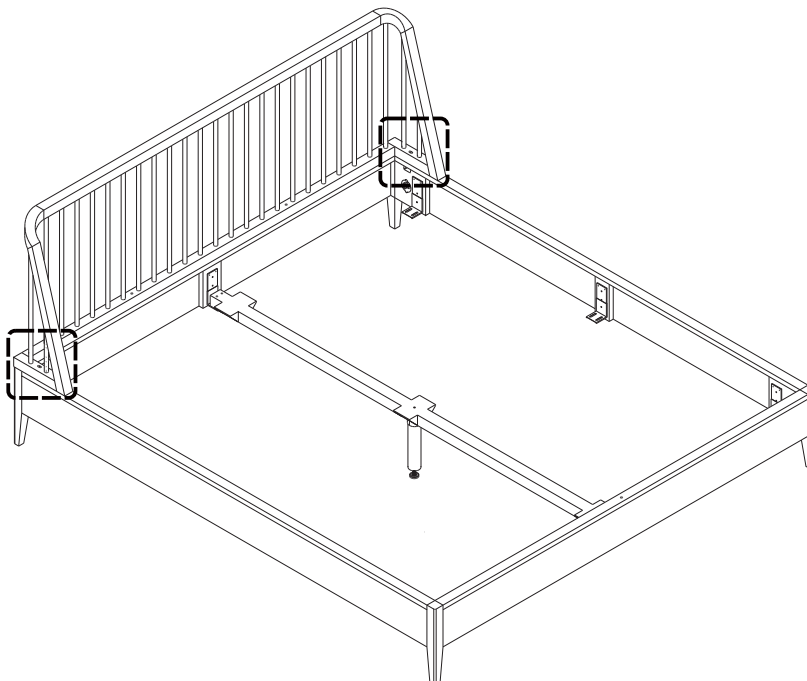


- ! - USE JCBC SCREW M6x70 (2X)
- USE WASHER M6x18 (2X)
- USE SPRING WASHER M6 (2X)
- USE LONG NUT M6 (2X)
- DO NOT FULLY TIGHTEN

SPINDLE BED - KING SIZE

ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION

F. RE-TIGHTEN THE SCREWS

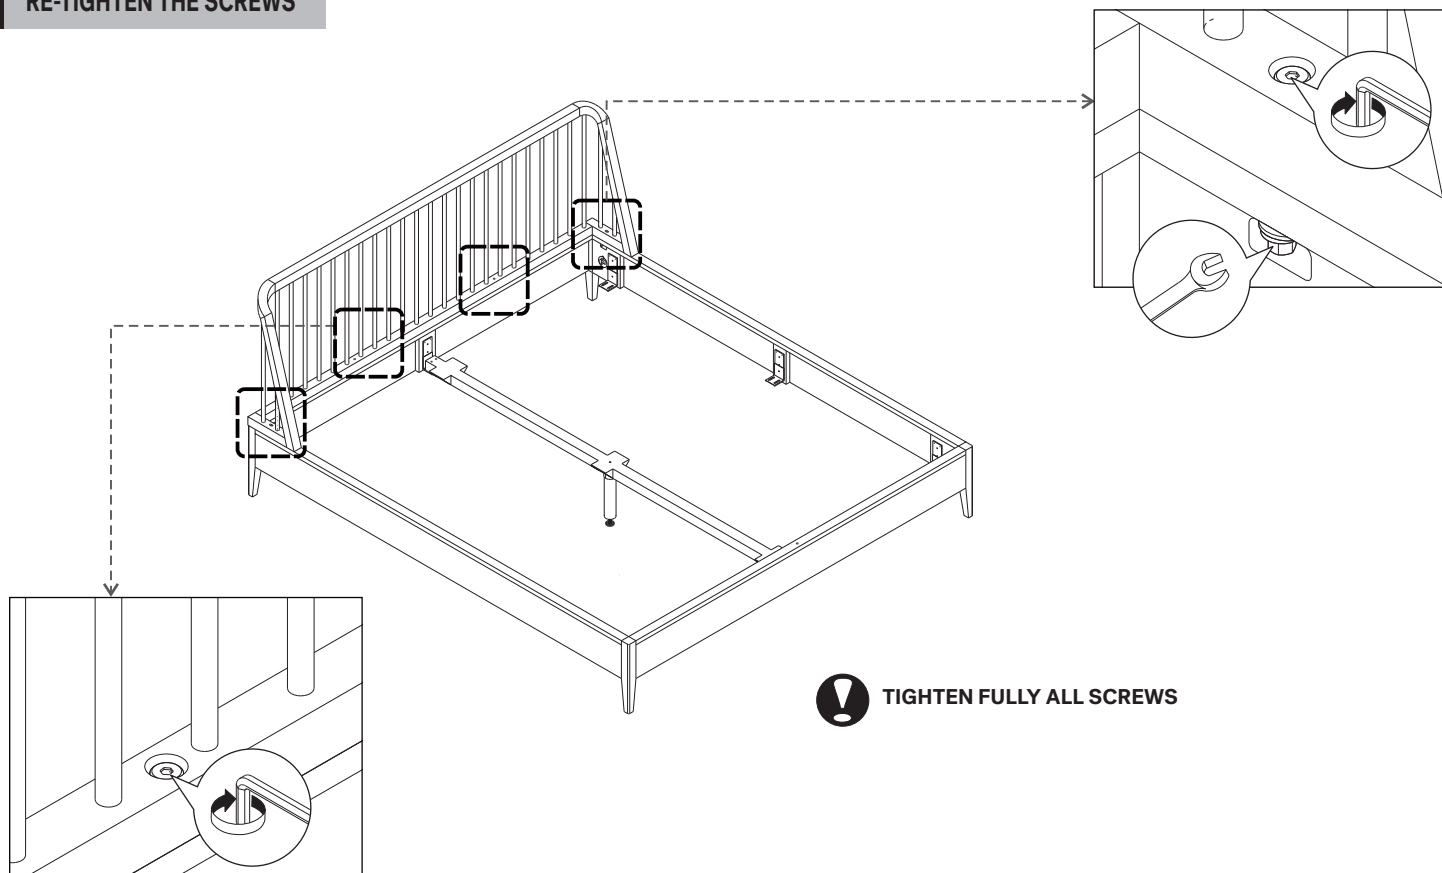

G. FINISH

